TPP0850 800 MHz 50X High Voltage Probe Instructions






Operating Information

The TPP0850 Probe is a high impedance probe with 50X attenuation that is designed for use with Tektronix DPO/MSO4000B & DPO/MSO5000 series ground-referenced oscilloscopes.

Connect the probe as shown in the illustrations below.

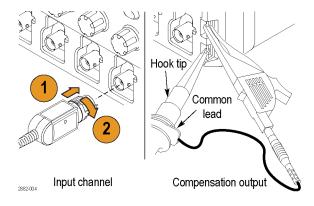

Compensating the Probe (Required for Initial Use)

You **must** compensate the probe after you attach it to an oscilloscope for the first time, or after you move it to another channel on the same oscilloscope.

- 1. Connect the probe to an oscilloscope channel.
- 2. On MSO/DPO5000 instruments:
 - **a.** Connect the probe to the probe compensation output terminals on the oscilloscope front panel.
 - **b.** Select Vertical > Probe Cal....
 - **c.** Select the channel number tab of the channel that you connected the probe to.
 - **d.** In the Calibration section, click Calibrate Probe.

On MSO/DPO4000B instruments:

- **a.** Press the Channel Menu front panel button for the channel that you connected the probe to.
- **b.** Push the More button until Probe Setup is selected.
- **c.** Push the Calibrate Probe button and follow the on-screen instructions.

If the probe compensation fails, verify that the signal and ground connections are secure at the Probe Comp connections on the oscilloscope, and secure at the probe head and tip.

Standard Accessories



WARNING. Do not substitute accessories from other products for use with this probe. Only use the accessories that are included with this probe.

To avoid electric shock when using the probe or accessories, keep your fingers behind the finger guard of the probe body and away from the shaded area shown in the accessory illustrations below.

Item

Description


Small hook tip (TASH) Use this tip to access test

points in tight spaces. Screw the hook tip onto the probe tip and then clamp the hook onto the circuit.

Rating: 1000 V CAT II

Note: Only the 1000 V CAT II rating is applicable when used with the TPP0850 probe.

Reorder Tektronix part number 013-0388-xx

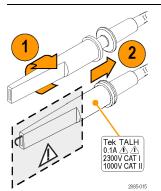

0.1A 🚣 🕰 2300V CAT I 1000V CAT II


Large hook tip (TALH)

Screw the hook tip onto the probe tip and then clamp the hook onto the circuit.

Rating: 1000 V CAT II

Note: Only the 1000 V CAT II rating is applicable when used with the TPP0850 probe.

Reorder Tektronix part number 013-0389-xx

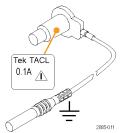

Common leads (6 in and 18 in) (TACL)

Slide the lead over the probe head and snap it into place.

Connect the banana plug end directly to your circuit common, or use the crocodile clip included with the probe.

Reorder Tektronix part numbers:

6 inch: 196-3526-xx 18 inch: 196-3527-xx


ltem

Description

Crocodile clip

Attach the clip to the banana end of the common lead and then to your circuit common.

Reorder Tektronix part number 344-0461-xx

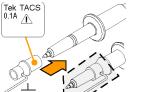



Common spring (TACS)

Use this accessory to limit aberrations on high frequency signals caused by common lead path inductance.

Bend the spring to reach nearby common connections (~1 in).

Reorder Tektronix part number 214-5299-xx

Color bands

Use these bands to identify the oscilloscope channel at the probe head.

Reorder Tektronix part number 016-1886-xx (5 pairs)

Optional Accessories

The accessories shown below are available for the probes and are rated ≤30 V unless indicated otherwise.

Accessory		Part number
BNC to Tip Adapter, Unterminated	28820	013-0291-xx
Rubber Spring Tip	2882012	206-0060-xx
Probe Holder		TPH1000





Specifications

Table 1: Electrical and mechanical specifications

Bandwidth (-3 dB)	800 MHz
System rise time (typical)	<525 ps
System input capacitance (typical)	1.8 pF
System attenuation accuracy	50:1 ±2.2%
System input resistance @DC	40 MΩ ±1%
Propagation delay	~6.1 ns
Cable length	1.3 m
Maximum input voltage (see Performance Graphs)	1000 V _{RMS} CAT II (2500 V _{pk})

Performance Graphs

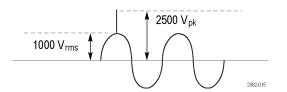

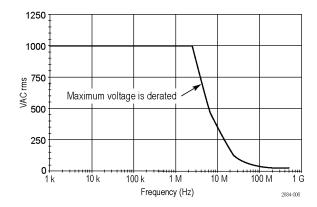

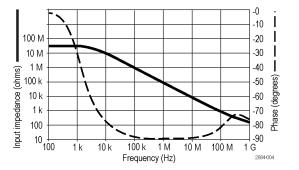


Table 2: Environmental specifications

Characteristics	Description
Temperature	
Operating Nonoperating	0 °C to +50 °C (+32 °F to +122 °F) -40 °C to +71 °C (-40 °F to +160 °F)
Humidity	
Operating	5% to 95% relative humidity (RH) up to +30 °C 5% to 75% RH above +30 °C to +50 °C. Noncondensing
Nonoperating	5% to 45% RH +65 °C to +85 °C. Noncondensing
Altitude	
Operating Nonoperating	3.0 km (9,842 ft) maximum 15.4 km (50,000 ft) maximum

Table 3: Certifications and compliances

Characteristics Description

Onaracteristics	Description
EC Declaration of Conformity	Compliance was demonstrated to the following specification as listed in the Official Journal of the European Communities:
	Low Voltage Directive 2006/95/EC: EN61010-031/A1: 2008
Measurement Category Product Examples	CAT III: Distribution-level mains, fixed installation
	CAT II: Local-level mains, appliances, portable equipment
	CAT I: Circuits not directly connected to mains.

Characteristics Description

\ <u>~~</u> /	Equipment Recycling. This product complies
Additional Safety Standards	UL61010-031;2010 CAN/CSA C22.2 No. 61010-031:07/A1:2010 IEC61010-031; IEC 61010-031/A1:2008
Pollution Degree 2	Do not operate in environments where conductive pollutants may be present (as defined in IEC 61010-1). Rated for indoor use only.



Equipment Recycling. This product complies with the European Union's requirements according to Directive 2002/96/EC on waste electrical and electronic equipment (WEEE). For more information about recycling options, check the Support/Service section of the Tektronix Web site (www.tektronix.com).

Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified. Using the probe or accessories in a manner not specified could result in a shock or fire hazard.

To Avoid Fire or Personal Injury

Ground-Referenced Oscilloscope Use. Do not float the common lead of this probe when using with ground referenced oscilloscopes (for example, DPO, MSO, and TDS series oscilloscopes). The common lead must be connected to earth potential (0 V).

Connect and Disconnect Properly. Connect the probe output to the measurement instrument before connecting the probe to the circuit under test. Disconnect the probe input and the probe common lead from the circuit under test before disconnecting the probe from the measurement instrument.

Avoid Electric Shock. To avoid injury or loss of life, do not connect or disconnect probes or test leads while they are connected to a voltage source.

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.

Avoid Electric Shock. When using probe accessories, never exceed the lowest rating of the probe or its accessory, whichever is less, including the measurement category and voltage rating.

Avoid Electric Overload. To avoid injury or fire hazard, do not apply potential to any input, including the reference inputs, that varies from ground by more than the maximum rating for that input.

Avoid Exposed Circuitry and Do not Operate Without Covers. Do not touch exposed connections and components when power is present.

Inspect The Probe And Accessories. Before each use, inspect probe and accessories for damage (cuts, tears, defects in the probe body, accessories, cable jacket, etc.). Do not use if damaged.


Do Not Operate in Wet/Damp Conditions.

Do Not Operate in an Explosive Atmosphere.

Keep Product Surfaces Clean and Dry.

Safety Terms and Symbols Terms in This Manual.

These terms may appear in this manual:

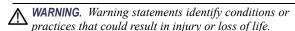



CAUTION. Caution statements identify conditions or practices that could result in damage to this product or other property.

Symbols on the Product. These symbols may appear on the product:



긭

Caution Earth Terminal Refer to Manual

Contacting Tektronix

Web site: www.tektronix.com
Phone: 1-800-833-9200
Address: Tektronix. Inc.

Department or name (if known) 14200 SW Karl Braun Drive

P.O. Box 500

Beaverton, OR 97077 USA

Email: techsupport@tektronix.com

Warranty Information

For warranty information, go to www.tektronix.com/warranty.

Copyright © Tektronix, Inc. All rights reserved.